

Stress tests with Raspberry Pi 4 and 3B+

Author:

Björn Kasper

bjoern.kasper@online.de

26th October 2021

Contents

1	Introduction	4
1.1	Load globally used libraries and set plot parameters	5
2	Define all cooling and ventilation scenarios	7
2.1	Raspberry Pi B4: Passive cooling (without fan)	7
2.1.1	Without heat sinks	7
2.1.2	With aluminum heat sinks	7
2.1.3	With copper heat sink (CPU)	7
2.2	Raspberry Pi B4: Active cooling (with fan)	7
2.2.1	With aluminum heat sinks	7
2.2.2	With copper heat sink (CPU)	8
2.2.3	With very large aluminum heatsink	8
2.2.4	With heat pipe and very large aluminum heatsink (ICE Tower)	8
2.3	Raspberry Pi B3+: Passive cooling (without fan):	8
2.3.1	With aluminum heat sinks	8
2.4	Implementation of all scenarios in a central dataframe and dictionaries	8
2.4.1	Central dataframe for all scenarios	8
2.4.2	Dynamically create dataframes for the scenarios	14
2.4.3	Create dictionary with filenames for all scenarios	15
3	Implementation of helper functions	18
3.1	Helper function for printing LaTeX strings	18
3.2	Variant 1: Function for reading the CPU core temperature	18
3.3	Variant 2: Function for reading the CPU core temperature (used here)	18
3.4	Function for reading the CPU core frequency	19
3.5	Function for reading the ambient temperature	20
3.6	Helper functions for stressing all cores of the CPU	21
3.7	Helper function to let the CPU cool down	22
3.8	Helper function for handling dataframes	22
3.9	Main worker function	23
4	Run the heating test	25
5	Save all to CSV files	26
6	Read in the CSV files and plot the measurements	28
6.1	Read in the CSV files in dataframes	28
6.2	Smoothing with a moving average filter	33
6.3	Helper functions for plotting the single measurements	34
6.4	Display / Plot data from dataframes	36
6.4.1	Comparative representation of the temperature curves	36
6.4.2	Scenario 01: RPi4, Plastic Case without heat sinks or fan	37
6.4.3	Scenario 02: R4, Plastic Case with glued-on aluminum heat sinks by thermal tape, without fan	38
6.4.4	Scenario 04: R4, Plastic Case with glued-on aluminum heat sinks by silicone pads, without fan	38
6.4.5	Scenario 05: R4, Plastic Case with glued-on copper heat sink by silicone pad, without fan	39
6.4.6	Scenario 11: R4, Plastic Case with glued-on aluminum heat sinks by thermal tape, with Noctua fan (3.3 V)	40
6.4.7	Scenario 12: R4, Plastic Case with glued-on copper heat sink by silicone pad, with Noctua fan (3.3 V)	40
6.4.8	Scenario 12: R4, Plastic Case with glued-on copper heat sink by silicone pad, with Noctua fan (3.3 V)	40

6.4.9	Scenario 14: R4, Without Case with large aluminum heat sink, glued-on by silicone pads, with ctrl fan (switch-on: 65 °C)	41
6.4.10	Scenario 15: R4, Without Case with large aluminum heat sink and copper heat pipes, glued-on by silicone pads, with fan (5 V)	43
6.4.11	Scenario 16: R4, Without Case with large aluminum heat sink and copper heat pipes, glued-on by silicone pads, with fan (3.3 V)	44
6.4.12	Scenario 17: R3+, Plastic Case with glued-on aluminum heat sinks by thermal tape, without fan	45
7	References	48

List of Figures

6.1	Plot: R4, Plastic Case with glued-on aluminum heat sinks by thermal tape, with Noctua fan (3.3 V)	40
6.2	Plot caption: R4, Plastic Case with glued-on copper heat sink by silicone pad, with Noctua fan (3.3 V)	41
6.3	Thermal image of the RPi 4B in idle state	42
6.4	Thermal image of the RPi 4B under CPU full load	43
6.5	Thermal image of the RPi 3B+ in idle state	45
6.6	Thermal image of the RPi 3B+ under CPU full load	46

List of Codes

1.1	Globally used libraries and plot parameters	5
2.1	Dataframe of all scenarios	9
2.2	Dataframe of all scenarios	12
2.3	Function for dynamically creation of empty dataframes	14
2.4	Function for creation of dictionary with filenames	15
3.1	Function for printing LaTeX strings	18
3.2	Function for getting CPU core temperature (variant 1)	18
3.3	Function for reading the CPU core temperature (variant 2)	19
3.4	Function for reading the CPU core frequency	20
3.5	Function for getting ambient temperature	21
3.6	Function for stressing the CPU as a background process	21
3.7	Function for running the CPU stress	22
3.8	Function to let CPU cool down	22
3.9	Dataframe for the measuring values	23
3.10	Function for adding rows to dataframes	23
3.11	Main worker function for running stress test and measure CPU temperature and frequency	24
4.1	Clear all data in measurement dataframe first	25
5.1	Save all measurements to CSV files	27

1 Introduction

The aim of this notebook is to stress the Raspberry Pi 4 for deciding between different cases and cooling types.

Sources (small selection):

- <https://github.com/nschloe/stressberry>
- <https://www.pragmaticlinux.com/2020/06/check-the-raspberry-pi-cpu-temperature/>
- <https://www.raspberrypi.org/blog/thermal-testing-raspberry-pi-4/>
- <http://blog.juliusschulz.de/blog/ultimate-ipython-notebook>

1.1 Load globally used libraries and set plot parameters

Code 1.1: Globally used libraries and plot parameters

```
1  import subprocess
2  import os
3  import threading
4  import time
5  import copy
6
7  #import smbus2
8  #import bme280
9
10 import pandas as pd
11 import numpy as np
12 #import prettytable as pt
13
14 import matplotlib.pyplot as plt
15 import matplotlib.dates as mdates
16 %matplotlib inline
17
18 # FutureWarning: Using an implicitly registered datetime converter
19   ↳ for a matplotlib plotting method.
20 # The converter was registered by pandas on import.
21 # Future versions of pandas will require you to explicitly register
22   ↳ matplotlib converters.
23 from pandas.plotting import register_matplotlib_converters
24 register_matplotlib_converters()
25
26 from IPython.display import set_matplotlib_formats
27 #matplotlib.matplotlib_inline.backend_inline.set_matplotlib_formats
28   ↳ ('pdf', 'png')
29 set_matplotlib_formats('pdf', 'png')
30
31 plt.rcParams['savefig.dpi'] = 80
32 plt.rcParams['savefig.bbox'] = "tight"
33
34 plt.rcParams['figure.autolayout'] = False
35 plt.rcParams['figure.figsize'] = 10, 6
36 plt.rcParams['axes.labelsize'] = 18
37 plt.rcParams['axes.titlesize'] = 20
38 plt.rcParams['font.size'] = 16
39 plt.rcParams['lines.linewidth'] = 2.0
40 plt.rcParams['lines.markersize'] = 8
41 plt.rcParams['legend.fontsize'] = 14
42
43 # Need to install dependent package first via 'apt install cm-super'
44 plt.rcParams['text.usetex'] = True
45 plt.rcParams['font.family'] = "serif"
46 plt.rcParams['font.serif'] = "cm"
47
48 from IPython.display import display, display_markdown, Latex
49 from IPython.display import Image
```

```
/tmp/ipykernel_7266/1355000292.py:26: DeprecationWarning: `
set_matplotlib_formats` is deprecated since IPython 7.23, directly use
`matplotlib_inline.backend_inline.set_matplotlib_formats()`
  set_matplotlib_formats('pdf', 'png')
```

2 Define all cooling and ventilation scenarios

The following cooling and ventilation scenarios are to be tested and measured for the **Raspberry Pi B4**. For the assignment of the experimental setups, the unique scenario IDs are in parentheses.

2.1 Raspberry Pi B4: Passive cooling (without fan)

2.1.1 Without heat sinks

- with well ventilated case (*scen_id_01*)

2.1.2 With aluminum heat sinks

- thermal coupling: double-sided thermal tape
 - well ventilated case (*scen_id_02*)
 - tightly closed pink Raspberry Pi case (*scen_id_03*)
- thermal coupling: silicone pads
 - well ventilated case (*scen_id_04*)

2.1.3 With copper heat sink (CPU)

- thermal coupling: silicone pad
 - well ventilated case (*scen_id_05*)

2.2 Raspberry Pi B4: Active cooling (with fan)

2.2.1 With aluminum heat sinks

- thermal coupling: double-sided thermal tape in well-ventilated case
 - with cheap, noisy fan
 - * fast speed via 5 V connection
 - blowing onto heat sink (*scen_id_06*)
 - blowing away from heat sink (*scen_id_07*)
 - * slow speed via 3.3 V connection
 - blowing onto heat sink (*scen_id_08*)
 - with high-quality, low-noise Noctua fan
 - * fast speed via 5 V connection
 - blowing onto heat sink (*scen_id_09*)
 - blowing away from heat sink (*scen_id_10*)
 - * slow speed via 3.3 V connection
 - blowing onto heat sink (*scen_id_11*)
- thermal coupling: silicone pads
 - well ventilated case (not carried out, as no new findings were expected)

2.2.2 With copper heat sink (CPU)

- thermal coupling: silicone pad in well ventilated case
 - with high-quality, low-noise Noctua fan
 - * slow speed via 3.3 V connection
 - blowing onto heat sink (*scen_id_12*)

2.2.3 With very large aluminum heatsink

- thermal coupling: silicone pads without enclosing case
 - fan controlled by GPIO (two-point controller: switch-off temperature approx. 10 K below switch-on temperature)
 - * switch-on temperature 70 °C (*scen_id_13*)
 - * Switch-on temperature 65 °C (*scen_id_14*)

2.2.4 With heat pipe and very large aluminum heatsink (ICE Tower)

- thermal coupling: silicone pads without enclosing case
 - fast speed via 5 V connection
 - * blowing onto heat sink (*scen_id_15*)
 - slow speed via 3.3 V connection
 - * blowing onto heat sink (*scen_id_16*)

2.3 Raspberry Pi B3+: Passive cooling (without fan):

As a comparison, the following cooling scenario will be measured for the **Raspberry Pi B3+**.

2.3.1 With aluminum heat sinks

- thermal coupling: double-sided thermal tape
 - well ventilated case (*scen_id_17*)

2.4 Implementation of all scenarios in a central dataframe and dictionaries

2.4.1 Central dataframe for all scenarios

All previously defined scenarios are organized in this central dataframe.

Code 2.1: Dataframe of all scenarios

```

1 df_measurement_configs = pd.DataFrame(columns=
2     ['Scenario IDs', 'Measurement platform', 'Dataframe, CSV/Image
    ↳ suffixes', 'Diagramm description'],
3     data=[
4     ['scen_id_01', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_woHeatSinks_woThermalTape_woFan', 'RPi4, Plastic
    ↳ Case without heat sinks or fan'],
5     ['scen_id_02', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wAluHeatSinks_thermalTape_woFan', 'R4, Plastic
    ↳ Case with glued-on aluminum heat sinks by thermal tape,
    ↳ without fan'],
6     ['scen_id_03', 'RaspiB4JupyterLab', '
    ↳ _pinkRaspiCase_wAluHeatSinks_thermalTape_woFan', 'R4, Pink
    ↳ Raspi Case with glued-on aluminum heat sinks by thermal tape,
    ↳ without fan'],
7     ['scen_id_04', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wAluHeatSinks_siliconPads_woFan', 'R4, Plastic
    ↳ Case with glued-on aluminum heat sinks by silicone pads,
    ↳ without fan'],
8     ['scen_id_05', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wCopperHeatSink_siliconPads_woFan', 'R4, Plastic
    ↳ Case with glued-on copper heat sink by silicone pad, without
    ↳ fan'],
9     ['scen_id_06', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wAluHeatSinks_thermalTape_wFan5V', 'R4, Plastic
    ↳ Case with glued-on aluminum heat sinks by thermal tape, with
    ↳ fan (5 V)'],
10    ['scen_id_07', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wAluHeatSinks_thermalTape_wFan5Vrev', 'R4,
    ↳ Plastic Case with glued-on aluminum heat sinks by thermal tape
    ↳ , with fan reverted (5 V)'],
11    ['scen_id_08', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wAluHeatSinks_thermalTape_wFan3V', 'R4, Plastic
    ↳ Case with glued-on aluminum heat sinks by thermal tape, with
    ↳ fan (3.3 V)'],
12    ['scen_id_09', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5V', 'R4,
    ↳ Plastic Case with glued-on aluminum heat sinks by thermal tape
    ↳ , with Noctua fan (5 V)'],
13    ['scen_id_10', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5Vrev', 'R4,
    ↳ Plastic Case with glued-on aluminum heat sinks by thermal
    ↳ tape, with Noctua fan reverted (5 V)'],
14    ['scen_id_11', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan3V', 'R4,
    ↳ Plastic Case with glued-on aluminum heat sinks by thermal tape
    ↳ , with Noctua fan (3.3 V)'],
15    ['scen_id_12', 'RaspiB4JupyterLab', '
    ↳ _plasticCase_wCopperHeatSink_siliconPad_wNoctuaFan3V', 'R4,
    ↳ Plastic Case with glued-on copper heat sink by silicone pad,
    ↳ with Noctua fan (3.3 V)'],
16    ['scen_id_13', 'RaspiB4JupyterLab', '
    ↳ _woCase_wBigAluHeatSink_siliconPads_CtrlFan70C', 'R4, Without
    ↳ Case with large aluminum heat sink, glued-on by silicone pads
    ↳ , with ctrl fan (switch-on: 70 $^\circ$C)'],
17    ['scen_id_14', 'RaspiB4JupyterLab', '
    ↳ _woCase_wBigAluHeatSink_siliconPads_CtrlFan65C', 'R4, Without
    ↳ Case with large aluminum heat sink, glued-on by silicone pads
    ↳ , with ctrl fan (switch-on: 65 $^\circ$C)'],
18    ['scen_id_15', 'RaspiB4JupyterLab', '
    ↳ _woCase_wAluCopperHeatPipes_siliconPads_wFan5V', 'R4, Without
    ↳ Case with large aluminum heat sink and copper heat pipes,

```

2) Define all cooling and ventilation scenarios

9

	Scenario IDs	Measurement platform \
0	scen_id_01	RaspiB4JupyterLab
1	scen_id_02	RaspiB4JupyterLab
2	scen_id_03	RaspiB4JupyterLab
3	scen_id_04	RaspiB4JupyterLab
4	scen_id_05	RaspiB4JupyterLab
5	scen_id_06	RaspiB4JupyterLab
6	scen_id_07	RaspiB4JupyterLab
7	scen_id_08	RaspiB4JupyterLab
8	scen_id_09	RaspiB4JupyterLab
9	scen_id_10	RaspiB4JupyterLab
10	scen_id_11	RaspiB4JupyterLab
11	scen_id_12	RaspiB4JupyterLab
12	scen_id_13	RaspiB4JupyterLab
13	scen_id_14	RaspiB4JupyterLab
14	scen_id_15	RaspiB4JupyterLab
15	scen_id_16	RaspiB4JupyterLab
16	scen_id_17	RaspiB3plusEPaper

	Dataframe, CSV/Image suffixes \
0	_plasticCase_woHeatSinks_woThermalTape_woFan
1	_plasticCase_wAluHeatSinks_thermalTape_woFan
2	_pinkRaspiCase_wAluHeatSinks_thermalTape_woFan
3	_plasticCase_wAluHeatSinks_siliconPads_woFan
4	_plasticCase_wCopperHeatSink_siliconPads_woFan
5	_plasticCase_wAluHeatSinks_thermalTape_wFan5V
6	_plasticCase_wAluHeatSinks_thermalTape_wFan5Vrev
7	_plasticCase_wAluHeatSinks_thermalTape_wFan3V
8	_plasticCase_wAluHeatSinks_thermalTape_wNoctua...
9	_plasticCase_wAluHeatSinks_thermalTape_wNoctua...
10	_plasticCase_wAluHeatSinks_thermalTape_wNoctua...
11	_plasticCase_wCopperHeatSink_siliconPad_wNoctu...
12	_woCase_wBigAluHeatSink_siliconPads_CtrlFan70C
13	_woCase_wBigAluHeatSink_siliconPads_CtrlFan65C
14	_woCase_wAluCopperHeatPipes_siliconPads_wFan5V
15	_woCase_wAluCopperHeatPipes_siliconPads_wFan3V
16	_plasticCase_wAluHeatSinks_thermalTape_woFan

	Diagramm description
0	RPi4, Plastic Case without heat sinks or fan
1	R4, Plastic Case with glued-on aluminum heat s...
2	R4, Pink Raspi Case with glued-on aluminum hea...
3	R4, Plastic Case with glued-on aluminum heat s...
4	R4, Plastic Case with glued-on copper heat sin...
5	R4, Plastic Case with glued-on aluminum heat s...
6	R4, Plastic Case with glued-on aluminum heat s...
7	R4, Plastic Case with glued-on aluminum heat s...
8	R4, Plastic Case with glued-on aluminum heat s...
9	R4, Plastic Case with glued-on aluminum heat s...
10	R4, Plastic Case with glued-on aluminum heat s...
11	R4, Plastic Case with glued-on copper heat sin...
12	R4, Without Case with large aluminum heat sink...
13	R4, Without Case with large aluminum heat sink...
14	R4, Without Case with large aluminum heat sink...
15	R4, Without Case with large aluminum heat sink...

16 R3+, Plastic Case with glued-on aluminum heat ...

Code 2.2: Dataframe of all scenarios

```
1 df_measurement_configs = pd.DataFrame(columns=
2     ['Scenario IDs', 'Measurement platform', 'Dataframe, CSV/Image
    ↳ suffixes', 'Diagramm description'],
3     data=[
4         ['scen_id_01', 'RaspiB4JupyterLab',
5          '_plasticCase_woHeatSinks_woThermalTape_woFan',
6          'RPi4, Plastic Case without heat sinks or fan'],
7
8         ['scen_id_02', 'RaspiB4JupyterLab',
9          '_plasticCase_wAluHeatSinks_thermalTape_woFan',
10         'R4, Plastic Case with glued-on aluminum heat sinks by thermal
    ↳ tape, without fan'],
11
12        ['scen_id_03', 'RaspiB4JupyterLab',
13         '_pinkRaspiCase_wAluHeatSinks_thermalTape_woFan',
14         'R4, Pink Raspi Case with glued-on aluminum heat sinks by
    ↳ thermal tape, without fan'],
15
16        ['scen_id_04', 'RaspiB4JupyterLab',
17         '_plasticCase_wAluHeatSinks_siliconPads_woFan',
18         'R4, Plastic Case with glued-on aluminum heat sinks by silicone
    ↳ pads, without fan'],
19
20        ['scen_id_05', 'RaspiB4JupyterLab',
21         '_plasticCase_wCopperHeatSink_siliconPads_woFan',
22         'R4, Plastic Case with glued-on copper heat sink by silicone
    ↳ pad, without fan'],
23
24        ['scen_id_06', 'RaspiB4JupyterLab',
25         '_plasticCase_wAluHeatSinks_thermalTape_wFan5V',
26         'R4, Plastic Case with glued-on aluminum heat sinks by thermal
    ↳ tape, with fan (5 V)'],
27
28        ['scen_id_07', 'RaspiB4JupyterLab',
29         '_plasticCase_wAluHeatSinks_thermalTape_wFan5Vrev',
30         'R4, Plastic Case with glued-on aluminum heat sinks by thermal
    ↳ tape, with fan reverted (5 V)'],
31
32        ['scen_id_08', 'RaspiB4JupyterLab',
33         '_plasticCase_wAluHeatSinks_thermalTape_wFan3V',
34         'R4, Plastic Case with glued-on aluminum heat sinks by thermal
    ↳ tape, with fan (3.3 V)'],
35
36        ['scen_id_09', 'RaspiB4JupyterLab',
37         '_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5V',
38         'R4, Plastic Case with glued-on aluminum heat sinks by thermal
    ↳ tape, with Noctua fan (5 V)'],
39
40        ['scen_id_10', 'RaspiB4JupyterLab',
41         '_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5Vrev',
42         'R4, Plastic Case with glued-on aluminum heat sinks by thermal
    ↳ tape, with Noctua fan reverted (5 V)'],
43
44        ['scen_id_11', 'RaspiB4JupyterLab',
45         '_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan3V',
46         'R4, Plastic Case with glued-on aluminum heat sinks by thermal
    ↳ tape, with Noctua fan (3.3 V)'],
47
48        ['scen_id_12', 'RaspiB4JupyterLab',
49         '_plasticCase_wCopperHeatSink_siliconPad_wNoctuaFan3V',
50         'R4, Plastic Case with glued-on copper heat sink by silicone
    ↳ pad, with Noctua fan (3.3 V)'],
```

2 Define all cooling and ventilation scenarios

12

	Scenario IDs	Measurement platform	\
0	scen_id_01	RaspiB4JupyterLab	
1	scen_id_02	RaspiB4JupyterLab	
2	scen_id_03	RaspiB4JupyterLab	
3	scen_id_04	RaspiB4JupyterLab	
4	scen_id_05	RaspiB4JupyterLab	
5	scen_id_06	RaspiB4JupyterLab	
6	scen_id_07	RaspiB4JupyterLab	
7	scen_id_08	RaspiB4JupyterLab	
8	scen_id_09	RaspiB4JupyterLab	
9	scen_id_10	RaspiB4JupyterLab	
10	scen_id_11	RaspiB4JupyterLab	
11	scen_id_12	RaspiB4JupyterLab	
12	scen_id_13	RaspiB4JupyterLab	
13	scen_id_14	RaspiB4JupyterLab	
14	scen_id_15	RaspiB4JupyterLab	
15	scen_id_16	RaspiB4JupyterLab	
16	scen_id_17	RaspiB3plusEPaper	
	Dataframe, CSV/Image	suffixes	\
0	_plasticCase_woHeatSinks_woThermalTape_woFan		
1	_plasticCase_wAluHeatSinks_thermalTape_woFan		
2	_pinkRaspiCase_wAluHeatSinks_thermalTape_woFan		
3	_plasticCase_wAluHeatSinks_siliconPads_woFan		
4	_plasticCase_wCopperHeatSink_siliconPads_woFan		
5	_plasticCase_wAluHeatSinks_thermalTape_wFan5V		
6	_plasticCase_wAluHeatSinks_thermalTape_wFan5Vrev		
7	_plasticCase_wAluHeatSinks_thermalTape_wFan3V		
8	_plasticCase_wAluHeatSinks_thermalTape_wNoctua...		
9	_plasticCase_wAluHeatSinks_thermalTape_wNoctua...		
10	_plasticCase_wAluHeatSinks_thermalTape_wNoctua...		
11	_plasticCase_wCopperHeatSink_siliconPad_wNoctu...		
12	_woCase_wBigAluHeatSink_siliconPads_CtrlFan70C		
13	_woCase_wBigAluHeatSink_siliconPads_CtrlFan65C		
14	_woCase_wAluCopperHeatPipes_siliconPads_wFan5V		
15	_woCase_wAluCopperHeatPipes_siliconPads_wFan3V		
16	_plasticCase_wAluHeatSinks_thermalTape_woFan		
	Diagramm description		
0	RPi4, Plastic Case without heat sinks or fan		
1	R4, Plastic Case with glued-on aluminum heat s...		
2	R4, Pink Raspi Case with glued-on aluminum hea...		
3	R4, Plastic Case with glued-on aluminum heat s...		
4	R4, Plastic Case with glued-on copper heat sin...		
5	R4, Plastic Case with glued-on aluminum heat s...		
6	R4, Plastic Case with glued-on aluminum heat s...		
7	R4, Plastic Case with glued-on aluminum heat s...		
8	R4, Plastic Case with glued-on aluminum heat s...		
9	R4, Plastic Case with glued-on aluminum heat s...		
10	R4, Plastic Case with glued-on aluminum heat s...		
11	R4, Plastic Case with glued-on copper heat sin...		
12	R4, Without Case with large aluminum heat sink...		
13	R4, Without Case with large aluminum heat sink...		
14	R4, Without Case with large aluminum heat sink...		
15	R4, Without Case with large aluminum heat sink...		

```
16 R3+, Plastic Case with glued-on aluminum heat ...
```

2.4.2 Dynamically create dataframes for the scenarios

This function dynamically creates empty dataframes with speaking names for the scenarios and stores them in a dictionary for further access. These dataframes are to be filled later with the recorded measuring data.

It is done by creating new dataframes in pandas with dynamic names - based on this idea: <https://stackoverflow.com/questions/40973687/create-new-dataframe-in-pandas-with-dynamic-names-also-add-new-column/40974699#40974699>.

Later on the column value based on another column from pandas dataframe is extracted, found here: <https://stackoverflow.com/questions/36684013/extract-column-value-based-on-another-column-pandas-dataframe/36685531#36685531>.

Code 2.3: Function for dynamically creation of empty dataframes

```
1 def create_dict_of_df_for_measurement_records(df=None):
2
3     _dict_of_df = {}
4     _df_empty = {}
5
6     for _df_scen_ids in df['Scenario IDs']:
7         _df_suffix_str = df.loc[df['Scenario IDs'] == _df_scen_ids,
8 ↪ 'Dataframe, CSV/Image suffixes'].iloc[0]
9         #print(_df_suffix_str)
10
11         _new_df_name_str = 'df_'+str(_df_scen_ids)+str(
12 ↪ _df_suffix_str)
13         #print(_new_df_name_str)
14
15         _dict_of_df[_new_df_name_str] = copy.deepcopy(_df_empty)
16
17     return _dict_of_df
```

Create an instance of a dictionary of all scenarios.

```
1 dict_of_df_records = create_dict_of_df_for_measurement_records(
2 ↪ df_measurement_configs)
3
4 display(dict_of_df_records)
```

```
{'df_scen_id_01_plasticCase_woHeatSinks_woThermalTape_woFan': {},
 'df_scen_id_02_plasticCase_wAluHeatSinks_thermalTape_woFan': {},
 'df_scen_id_03_pinkRaspiCase_wAluHeatSinks_thermalTape_woFan': {},
 'df_scen_id_04_plasticCase_wAluHeatSinks_siliconPads_woFan': {},
 'df_scen_id_05_plasticCase_wCopperHeatSink_siliconPads_woFan': {},
 'df_scen_id_06_plasticCase_wAluHeatSinks_thermalTape_wFan5V': {},
 'df_scen_id_07_plasticCase_wAluHeatSinks_thermalTape_wFan5Vrev': {},
```

```

'df_scen_id_08_plasticCase_wAluHeatSinks_thermalTape_wFan3V ': {},
'df_scen_id_09_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5V ':
{},
'df_scen_id_10_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5Vrev
': {},
'df_scen_id_11_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan3V ':
{},
'df_scen_id_12_plasticCase_wCopperHeatSink_siliconPad_wNoctuaFan3V ':
{},
'df_scen_id_13_woCase_wBigAluHeatSink_siliconPads_CtrlFan70C ': {},
'df_scen_id_14_woCase_wBigAluHeatSink_siliconPads_CtrlFan65C ': {},
'df_scen_id_15_woCase_wAluCopperHeatPipes_siliconPads_wFan5V ': {},
'df_scen_id_16_woCase_wAluCopperHeatPipes_siliconPads_wFan3V ': {},
'df_scen_id_17_plasticCase_wAluHeatSinks_thermalTape_woFan ': {}

```

2.4.3 Create dictionary with filenames for all scenarios

This function creates a dictionary with speaking filenames used for storing the recorded measuring data in CSV files and for storing the plotted diagrams in PDF files.

This is done by extracting the column value based on another column from a pandas dataframe. The idea for this was found here: <https://stackoverflow.com/questions/36684013/extract-column-value-based-on-another-column-pandas-dataframe/36685531#36685531>.

Code 2.4: Function for creation of dictionary with filenames

```

1  def create_filenames_for_measurement_records(df=None):
2
3      _dict_of_filenames = {}
4
5      for _df_scen_ids in df['Scenario IDs']:
6          _platform_str = df.loc[df['Scenario IDs'] == _df_scen_ids,
↪ 'Measurement platform'].iloc[0]
7          #print(_platform_str)
8
9          _filename_suffix_str = df.loc[df['Scenario IDs'] ==
↪ _df_scen_ids, 'Dataframe, CSV/Image suffixes'].iloc[0]
10         #print(_filename_suffix_str)
11
12         _new_filename_str = str(_df_scen_ids)+'_'+str(_platform_str
↪ )+str(_filename_suffix_str)
13         #print(_new_filename_str)
14
15         _dict_of_filenames[_df_scen_ids] = _new_filename_str
16
17     return _dict_of_filenames

```

Create an instance of a dictionary of filenames.

```

1 dict_of_filenames = create_filenames_for_measurement_records(
    ↪ df_measurement_configs)
2
3 display(dict_of_filenames)

```

```

{'scen_id_01': '
scen_id_01_RaspiB4JupyterLab_plasticCase_woHeatSinks_woThermalTape_woFan
',
'scen_id_02': '
scen_id_02_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_woFan
',
'scen_id_03': '
scen_id_03_RaspiB4JupyterLab_pinkRaspiCase_wAluHeatSinks_thermalTape_woFan
',
'scen_id_04': '
scen_id_04_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_siliconPads_woFan
',
'scen_id_05': '
scen_id_05_RaspiB4JupyterLab_plasticCase_wCopperHeatSink_siliconPads_woFan
',
'scen_id_06': '
scen_id_06_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wFan5V
',
'scen_id_07': '
scen_id_07_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wFan5Vrev
',
'scen_id_08': '
scen_id_08_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wFan3V
',
'scen_id_09': '
scen_id_09_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5V
',
'scen_id_10': '
scen_id_10_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5Vrev
',
'scen_id_11': '
scen_id_11_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan3V
',
'scen_id_12': '
scen_id_12_RaspiB4JupyterLab_plasticCase_wCopperHeatSink_siliconPad_wNoctuaFan3V
',
'scen_id_13': '
scen_id_13_RaspiB4JupyterLab_woCase_wBigAluHeatSink_siliconPads_CtrlFan70C
',
'scen_id_14': '
scen_id_14_RaspiB4JupyterLab_woCase_wBigAluHeatSink_siliconPads_CtrlFan65C
',
'scen_id_15': '
scen_id_15_RaspiB4JupyterLab_woCase_wAluCopperHeatPipes_siliconPads_wFan5V
',
'scen_id_16': '
scen_id_16_RaspiB4JupyterLab_woCase_wAluCopperHeatPipes_siliconPads_wFan3V
',

```



```
'scen_id_17': '  
scen_id_17_RaspiB3plusEPaper_plasticCase_wAluHeatSinks_thermalTape_woFan  
'}
```

3 Implementation of helper functions

3.1 Helper function for printing LaTeX strings

This little helper function prints LaTeX strings nicely (especially mathematical symbols, such as the \circ sign).

Code 3.1: Function for printing LaTeX strings

```
1 def print_latex(str):
2     display(Latex(str))
```

3.2 Variant 1: Function for reading the CPU core temperature

This implementation retrieves the CPU core temperature information from the system file `/sys/class/thermal/thermal_zone0/temp`.

The idea was found here: <https://www.pragmaticlinux.com/2020/06/check-the-raspberry-pi-cpu-temperature/>.

Code 3.2: Function for getting CPU core temperature (variant 1)

```
1 def get_cpu_temp_old():
2     """
3     Obtains the current value of the CPU temperature.
4     :returns: Current value of the CPU temperature if successful,
5     ↪ zero value otherwise.
6     :rtype: float
7     """
8     # Initialize the result.
9     result = 0.0
10    # The first line in this file holds the CPU temperature as an
11    ↪ integer times 1000.
12    # Read the first line and remove the newline character at the
13    ↪ end of the string.
14    if os.path.isfile('/sys/class/thermal/thermal_zone0/temp'):
15        with open('/sys/class/thermal/thermal_zone0/temp') as f:
16            line = f.readline().strip()
17            # Test if the string is an integer as expected.
18            if line.isdigit():
19                # Convert the string with the CPU temperature to a
20                ↪ float in degrees Celsius.
21                result = float(line) / 1000
22            # Give the result back to the caller.
23    return result
```

3.3 Variant 2: Function for reading the CPU core temperature (used here)

This implementation retrieves the temperature information from the command line tool `vcgencmd`. In the bash console you can get the same result by issuing:

```
$ vcgencmd measure_temp
```

The basic idea was found here: <https://github.com/nschloe/stressberry/blob/main/stressberry/main.py>.

Code 3.3: Function for reading the CPU core temperature (variant 2)

```
1 def get_cpu_temp(filename=None):
2     """Returns the core temperature in Celsius."""
3     if filename is not None:
4         with open(filename) as f:
5             temp = float(f.read()) / 1000
6     else:
7         # Using vcgencmd is specific to the raspberry pi
8         out = subprocess.check_output(["vcgencmd", "measure_temp"])
9         ↪ .decode("utf-8")
10        temp = float(out.replace("temp=", "").replace("'C", ""))
11    return temp
```

3.4 Function for reading the CPU core frequency

The frequency information is retrieved from the command line tool `vcgencmd` also. In the bash console you can get the same result by issuing:

```
$ vcgencmd measure_clock arm
```

Issue regarding the **Raspberry Pi 3B+** (2021-06-01):

With the latest Raspbian updates there seems to be a bug in reading the CPU frequency with the otherwise propagated command line call `vcgencmd measure_clock arm`. With this call only frequencies around 600 MHz are displayed even under full load of the CPU. The direct query of the `/sys` device tree provides the correct results for the first core:

```
$ cat /sys/devices/system/cpu/cpu0/cpufreq/scaling_cur_freq
```

Therefore, the function has been extended to first query which Raspberry Pi hardware is present. If it is a **RPi 3B+**, the current CPU frequency is queried directly from the device tree instead of via the `vcgencmd` tools.

Code 3.4: Function for reading the CPU core frequency

```
1 def get_cpu_freq(filename=None):
2     if os.path.isfile('/sys/firmware/devicetree/base/model'):
3         with open('/sys/firmware/devicetree/base/model') as f:
4             hw_version = f.readline().strip()
5
6     # RPi 3B+: there seems to be a bug in reading CPU frequency
7     ↪ with 'vcgencmd'
8     if (hw_version.startswith('Raspberry Pi 3 Model B Plus')):
9         if os.path.isfile('/sys/devices/system/cpu/cpu0/cpufreq/
10         ↪ scaling_cur_freq'):
11             with open('/sys/devices/system/cpu/cpu0/cpufreq/
12             ↪ scaling_cur_freq') as f:
13                 line = f.readline().strip()
14                 # Test if the string is an integer as expected.
15                 if line.isdigit():
16                     # Convert the string with the CPU frequency to a
17                     ↪ float in MHz.
18                     frequency = float(line) / 1000
19     # RPi 4B: 'vcgencmd' does work as expected ...
20     else:
21         """Returns the CPU frequency in MHz"""
22         if filename is not None:
23             with open(filename) as f:
24                 frequency = float(f.read()) / 1000
25         else:
26             # Only vcgencmd measure_clock arm is accurate on
27             ↪ Raspberry Pi.
28             # Per: https://www.raspberrypi.org/forums/viewtopic.php
29             ↪ ?f=63&t=219358&start=25
30             out = subprocess.check_output(["vcgencmd", "
31             ↪ measure_clock_arm"]).decode("utf-8")
32             frequency = float(out.split("=")[1]) / 1000000
33
34     return frequency
```

3.5 Function for reading the ambient temperature

In order to compare the recorded CPU core temperatures of the different housing and cooling scenarios, the temperature curves must be normalized with the curves of the simultaneously measured ambient temperature.

However, only the curves of the so-called “overtemperature” are comparable, which is the difference between the curves of the CPU core temperature and the ambient temperature.

The external Bosch sensor *BME280* is used to measure the ambient temperature. This is connected to the Raspberry Pi via a USB-I2C adapter. The installation of the required kernel module is described in the Jupyter notebook [BME280.ipynb](#).

The following function initializes the BME280 sensor and reads the ambient temperature afterwards.

Code 3.5: Function for getting ambient temperature

```
1 # i2c bus on /dev/i2c-11
2 port = 11
3 # i2c address of BME280
4 address = 0x76
5 bus = smbus2.SMBus(port)
6
7 def get_ambient_temp():
8     """Returns the ambient temperature in Celsius."""
9
10    calibration_params = bme280.load_calibration_params(bus,
11    ↪ address)
12
13    # the sample method will take a single reading and return
14    # a compensated_reading object
15    data_obj = bme280.sample(bus, address, calibration_params)
16
17    return data_obj.temperature
```

3.6 Helper functions for stressing all cores of the CPU

Stress is created by the command line tool stress. It has to be installed first by issuing:

```
$ sudo apt install stress
```

Code 3.6: Function for stressing the CPU as a background process

```
1 # Helper function to call the 'stress' command line tool
2 def stress_cpu(num_cpus, time):
3     subprocess.check_call(["stress", "--cpu", str(num_cpus), "--"
4     ↪ timeout", f"{time}s"])
5     return
```

This is a function for stressing all cores of the CPU. The idea was found here: <https://github.com/nschloe/stressberry/blob/main/stressberry/main.py>.

Code 3.7: Function for running the CPU stress

```
1 def run_stress(stress_duration=300, idle_duration=120, cores=None):
2     """Run stress test for specified duration with specified idle
3     ↪ times
4     at the start and end of the test.
5     """
6     if cores is None:
7         cores = os.cpu_count()
8
9     print(f"Preparing to stress [{cores}] CPU Cores for [{
10    ↪ stress_duration}] seconds")
11    print(f"Idling for {idle_duration} seconds...")
12    time.sleep(idle_duration)
13
14    print(f"Starting the stress load on [{cores}] CPU Cores for [{
15    ↪ stress_duration}] seconds")
16    stress_cpu(num_cpus=cores, time=stress_duration)
17
18    print(f"Idling for {idle_duration} seconds...")
19    time.sleep(idle_duration)
```

3.7 Helper function to let the CPU cool down

This function is used to let the CPU cool down first to find a stable baseline.

Code 3.8: Function to let CPU cool down

```
1 def cpu_cooldown(interval=60, filename=None):
2     """Lets the CPU cool down until the temperature does not change
3     ↪ anymore."""
4     prev_tmp = get_cpu_temp()
5     while True:
6         time.sleep(interval)
7         tmp = get_cpu_temp()
8         print_latex(
9             f'Current temperature: {tmp:4.1f}  $\circ$ C - '
10            f'Previous temperature: {prev_tmp:4.1f}  $\circ$ C'
11        )
12        if abs(tmp - prev_tmp) < 0.2:
13            break
14        prev_tmp = tmp
15    return tmp
```

3.8 Helper function for handling dataframes

First, a dataframe is created and at the same time the column headers are set. The function `dataframe_add_row()` is used to add the measured values to the dataframe in the form of new rows.

Code 3.9: Dataframe for the measuring values

```
1 df_meas_values = pd.DataFrame(columns=['Time', 'CPU Temperature', 'CPU Frequency', 'Ambient Temperature'])
```

Code 3.10: Function for adding rows to dataframes

```
1 def dataframe_add_row(df=None, row=[]):
2     if (df is None):
3         return
4
5     # Add a row
6     df.loc[-1] = row
7
8     # Shift the index
9     df.index = df.index + 1
10
11    # Reset the index of dataframe and avoid the old index being
12    ↪ added as a column
    df.reset_index(drop=True, inplace=True)
```

3.9 Main worker function

This is the main worker function for running the stress test in another thread while measuring CPU temperature and frequency simultaneously. The basic idea was found here: <https://github.com/nschloe/stressberry/blob/main/stressberry/cli/run.py>.

Code 3.11: Main worker function for running stress test and measure CPU temperature and frequency

```

1  def run(argv=None):
2      # Cool down first
3      print("Awaiting stable baseline temperature ...")
4      cpu_cooldown(interval=60)
5
6      # Start the stress test in another thread
7      t = threading.Thread(
8          target=lambda: run_stress(stress_duration=900,
↪ idle_duration=300, cores=4), args=()
9      )
10     # Init event handler for killing the thread
11     t.event = threading.Event()
12     # Start the thread
13     t.start()
14
15     # Init row array
16     values_row = []
17     # Get starting time
18     start_time = time.time()
19     while t.is_alive():
20         try:
21             # Get time relative to starting time and round to 1
↪ decimal
22             timestamp = float("{:.1f}".format(time.time() -
↪ start_time))
23             # Get CPU temperature and round to 1 decimal
24             temperature_cpu = float("{:.1f}".format(get_cpu_temp()))
↪ )
25             # Get ambient temperature and round to 1 decimal
26             temperature_ambient = float("{:.1f}".format(
↪ get_ambient_temp()))
27             # Get CPU frequency and round to 1 decimal
28             frequency = float("{:.1f}".format(get_cpu_freq()))
29
30             values_row = [ timestamp,
31                             temperature_cpu,
32                             frequency,
33                             temperature_ambient
34                             ]
35
36             dataframe_add_row(df_meas_values, values_row)
37
38             print_latex(
39                 f'Time: {timestamp} s,\t'
40                 f'CPU Temperature: {temperature_cpu} $^\circ$C
↪ ,\t'
41                 f'Ambient Temperature: {temperature_ambient} $
↪ ^\circ$C,\t'
42                 f'Frequency: {frequency} MHz'
43             )
44
45             # Choose the sample interval such that we have a
↪ respectable number of data points
46             t.join(2.0)
47
48     except KeyboardInterrupt:
49         print("Keyboard Interrupt ^C detected.")
50         print("Bye.")
51         # Stop the thread by calling the event
52         t.event.set()
53         break
54

```


4 Run the heating test

Code 4.1: Clear all data in measurement dataframe first

```
1 # Clear all data in dataframe
2 df_meas_values = df_meas_values.iloc[0:0]
3
4 run()
```

```
1 display(df_meas_values)
```

```
Empty DataFrame
Columns: [Time, CPU Temperature, CPU Frequency, Ambient Temperature]
Index: []
```

5 Save all to CSV files

Here you have to decide where (with indication of path and file name) the current measurement should be stored by uncommenting and commenting.

Code 5.1: Save all measurements to CSV files

```
1  str_path = r'./data_files/'
2
3  #str_current_screnario = 'scen_id_01' #
    ↳ scen_id_01_RaspiB4JupyterLab_plasticCase_woHeatSinks_woThermalTape_woFan
    ↳
4  #str_current_screnario = 'scen_id_02' #
    ↳ scen_id_02_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_woFan
    ↳
5  #str_current_screnario = 'scen_id_03' #
    ↳ scen_id_03_RaspiB4JupyterLab_pinkRaspiCase_wAluHeatSinks_thermalTape_woFan
    ↳
6  #str_current_screnario = 'scen_id_04' #
    ↳ scen_id_04_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_siliconPads_woFan
    ↳
7  #str_current_screnario = 'scen_id_05' #
    ↳ scen_id_05_RaspiB4JupyterLab_plasticCase_wCopperHeatSink_siliconPads_woFan
    ↳
8  #str_current_screnario = 'scen_id_06' #
    ↳ scen_id_06_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wFan5V
    ↳
9  #str_current_screnario = 'scen_id_07' #
    ↳ scen_id_07_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wFan5Vr
    ↳
10 #str_current_screnario = 'scen_id_08' #
    ↳ scen_id_08_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wFan3V
    ↳
11 #str_current_screnario = 'scen_id_09' #
    ↳ scen_id_09_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wNoctual
    ↳
12 #str_current_screnario = 'scen_id_10' #
    ↳ scen_id_10_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wNoctual
    ↳
13 #str_current_screnario = 'scen_id_11' #
    ↳ scen_id_11_RaspiB4JupyterLab_plasticCase_wAluHeatSinks_thermalTape_wNoctual
    ↳
14 #str_current_screnario = 'scen_id_12' #
    ↳ scen_id_12_RaspiB4JupyterLab_plasticCase_wCopperHeatSink_siliconPad_wNoctu
    ↳
15 #str_current_screnario = 'scen_id_13' #
    ↳ scen_id_13_RaspiB4JupyterLab_woCase_wBigAluHeatSink_siliconPads_CtrlFan70C
    ↳
16 #str_current_screnario = 'scen_id_14' #
    ↳ scen_id_14_RaspiB4JupyterLab_woCase_wBigAluHeatSink_siliconPads_CtrlFan65C
    ↳
17 #str_current_screnario = 'scen_id_15' #
    ↳ scen_id_15_RaspiB4JupyterLab_woCase_wAluCopperHeatPipes_siliconPads_wFan5V
    ↳
18 str_current_screnario = 'scen_id_16' #
    ↳ scen_id_16_RaspiB4JupyterLab_woCase_wAluCopperHeatPipes_siliconPads_wFan3V
    ↳
19 #str_current_screnario = 'scen_id_17' #
    ↳ scen_id_17_RaspiB3plusEPaper_plasticCase_wAluHeatSinks_thermalTape_woFan
    ↳
20
21 #print(dict_of_filenames[str_current_screnario])
22 df_measures.values.to_csv(str_path + dict_of_filenames[
5 Save all to CSV files    ↳ str_current_screnario] + '.csv', sep='\t', index = False,
    ↳ header=True)
```

6 Read in the CSV files and plot the measurements

6.1 Read in the CSV files in dataframes

This is a helper function for creating dataframes from CSV files.

```
1 def create_dictionary_from_csv(filename, offset=0, cols_wanted=1):
2     my_dataframe = pd.read_csv(filename, sep='\t', index_col=False,
    ↪ decimal='.', header=offset)
3
4     # Delete all cloumns after the desired ones
5     my_dataframe.drop(my_dataframe.columns[cols_wanted:], axis=1,
    ↪ inplace=True)
6
7     return my_dataframe
```

Here all existing (has to be proven first!) data record files are read in to the dictionary of record dataframes. For this purpose the scenario IDs are searched recursively in the dictionary of data records to get the dataframe names.

```
1 for scen_ids in dict_of_filenames:
2     #print(dict_of_filenames[scen_ids])
3
4     str_filepath = './data_files/' + dict_of_filenames[scen_ids] + '
    ↪ .csv'
5
6     # Prove if filenames really exist!
7     if os.path.isfile(str_filepath):
8         # Search recursively in dictionary of data records with
9         # the scenario IDs to get the dataframe names
10        for df_names in dict_of_df_records:
11            if scen_ids in df_names:
12                #print(df_names)
13                dict_of_df_records[df_names] =
    ↪ create_dictionary_from_csv(filename=str_filepath, offset=0,
    ↪ cols_wanted=4)
```

Whether all dataframes have been filled correctly is checked again here:

```
1 for df_names in dict_of_df_records:
2     # Display only the filled dataframes
3     if not len(dict_of_df_records[df_names]) == 0:
4         print("Dataframe name: {}".format(df_names))
5         display(dict_of_df_records[df_names].head(3))
6         display(dict_of_df_records[df_names].dtypes)
7         print('\n')
```

Dataframe name:
df_scen_id_01_plasticCase_woHeatSinks_woThermalTape_woFan

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	49.1	1500.3	20.2
1	2.1	48.7	800.2	20.1

2	4.3	49.6	800.2	20.1
---	-----	------	-------	------

```
Time          float64
CPU Temperature float64
CPU Frequency float64
Ambient Temperature float64
dtype: object
```

Dataframe name:
df_scen_id_02_plasticCase_wAluHeatSinks_thermalTape_woFan

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	48.7	1500.3	20.3
1	2.1	48.2	800.2	20.4
2	4.3	47.2	900.2	20.4

```
Time          float64
CPU Temperature float64
CPU Frequency float64
Ambient Temperature float64
dtype: object
```

Dataframe name:
df_scen_id_03_pinkRaspiCase_wAluHeatSinks_thermalTape_woFan

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	49.6	900.2	20.9
1	2.1	48.7	1000.3	20.9
2	4.3	48.7	1000.3	20.9

```
Time          float64
CPU Temperature float64
CPU Frequency float64
Ambient Temperature float64
dtype: object
```

Dataframe name:
df_scen_id_04_plasticCase_wAluHeatSinks_siliconPads_woFan

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	51.6	1500.4	23.6
1	2.1	52.5	1000.2	23.6
2	4.3	52.1	800.2	23.6

```
Time          float64
CPU Temperature float64
CPU Frequency float64
Ambient Temperature float64
dtype: object
```

```
Dataframe name:
df_scen_id_05_plasticCase_wCopperHeatSink_siliconPads_woFan
```

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	53.5	1000.3	24.0
1	2.1	52.1	900.2	24.0
2	4.3	53.5	900.2	24.0

```
Time                float64
CPU Temperature      float64
CPU Frequency        float64
Ambient Temperature  float64
dtype: object
```

```
Dataframe name:
df_scen_id_06_plasticCase_wAluHeatSinks_thermalTape_wFan5V
```

	Time	CPU Temperature	CPU Frequency
0	0.0	30.6	900.2
1	2.1	29.2	800.2
2	4.2	29.7	900.2

```
Time                float64
CPU Temperature      float64
CPU Frequency        float64
dtype: object
```

```
Dataframe name:
df_scen_id_07_plasticCase_wAluHeatSinks_thermalTape_wFan5Vrev
```

	Time	CPU Temperature	CPU Frequency
0	0.0	36.5	1500.3
1	2.1	36.0	700.2
2	4.2	37.4	1500.4

```
Time                float64
CPU Temperature      float64
CPU Frequency        float64
dtype: object
```

```
Dataframe name:
df_scen_id_08_plasticCase_wAluHeatSinks_thermalTape_wFan3V
```

	Time	CPU Temperature	CPU Frequency
0	0.0	34.5	1000.3
1	2.1	35.0	900.2
2	4.2	35.0	900.2

```
Time          float64
CPU Temperature float64
CPU Frequency float64
dtype: object
```

Dataframe name:
df_scen_id_09_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5V

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	28.7	1000.2	20.6
1	2.1	29.7	900.2	20.6
2	4.3	30.6	900.2	20.6

```
Time          float64
CPU Temperature float64
CPU Frequency float64
Ambient Temperature float64
dtype: object
```

Dataframe name:
df_scen_id_10_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan5Vrev

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	33.6	1000.3	20.7
1	2.1	33.1	800.2	20.7
2	4.3	32.6	1000.2	20.7

```
Time          float64
CPU Temperature float64
CPU Frequency float64
Ambient Temperature float64
dtype: object
```

Dataframe name:
df_scen_id_11_plasticCase_wAluHeatSinks_thermalTape_wNoctuaFan3V

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	31.6	900.2	20.4
1	2.1	32.1	900.2	20.4
2	4.3	32.6	1000.2	20.4

```
Time                float64
CPU Temperature     float64
CPU Frequency       float64
Ambient Temperature float64
dtype: object
```

Dataframe name:
df_scen_id_12_plasticCase_wCopperHeatSink_siliconPad_wNoctuaFan3V

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	35.5	1000.2	24.3
1	2.1	35.5	1000.2	24.3
2	4.3	35.5	800.2	24.3

```
Time                float64
CPU Temperature     float64
CPU Frequency       float64
Ambient Temperature float64
dtype: object
```

Dataframe name:
df_scen_id_13_woCase_wBigAluHeatSink_siliconPads_CtrlFan70C

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	48.2	1000.3	20.3
1	2.1	47.7	1000.3	20.3
2	4.3	48.2	700.2	20.3

```
Time                float64
CPU Temperature     float64
CPU Frequency       float64
Ambient Temperature float64
dtype: object
```

Dataframe name:
df_scen_id_14_woCase_wBigAluHeatSink_siliconPads_CtrlFan65C

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	45.7	900.2	24.6
1	2.1	45.7	700.2	24.6
2	4.3	46.2	900.2	24.5

```
Time                float64
CPU Temperature     float64
CPU Frequency       float64
Ambient Temperature float64
dtype: object
```



```
Dataframe name:
df_scen_id_15_woCase_wAluCopperHeatPipes_siliconPads_wFan5V
```

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	35.5	1500.3	29.1
1	2.1	35.5	800.2	29.1
2	4.3	35.0	1000.2	29.1

```
Time                float64
CPU Temperature      float64
CPU Frequency        float64
Ambient Temperature float64
dtype: object
```

```
Dataframe name:
df_scen_id_16_woCase_wAluCopperHeatPipes_siliconPads_wFan3V
```

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	37.9	900.2	29.2
1	2.2	37.9	1000.3	29.2
2	4.3	37.9	1000.3	29.1

```
Time                float64
CPU Temperature      float64
CPU Frequency        float64
Ambient Temperature float64
dtype: object
```

```
Dataframe name:
df_scen_id_17_plasticCase_wAluHeatSinks_thermalTape_woFan
```

	Time	CPU Temperature	CPU Frequency	Ambient Temperature
0	0.0	47.8	800.0	23.2
1	2.2	47.8	800.0	23.2
2	4.3	47.8	800.0	23.2

```
Time                float64
CPU Temperature      float64
CPU Frequency        float64
Ambient Temperature float64
dtype: object
```

6.2 Smoothing with a moving average filter

Here the column of the CPU temperature is smoothed a bit by a moving average filter:

```

1 i_avg_window = 6
2
3 for df_names in dict_of_df_records:
4     # Smoothe only the filled dataframes
5     if not len(dict_of_df_records[df_names]) == 0:
6         #print("Dataframe name: {}".format(df_names))
7         #display(dict_of_df_records[df_names].head(3))
8         dict_of_df_records[df_names]['CPU Temperature'] =
↪ dict_of_df_records[df_names]['CPU Temperature'].rolling(
↪ window=i_avg_window).mean()

```

6.3 Helper functions for plotting the single measurements

This function retrieves all necessary data and metainformation for plotting: the **diagramm title**, the **file path** and **name** for storing the diagram plot and the handle to the dataframe holding the **recorded data**.

```

1 def get_data_and_meta_infos_for_plotting(str_scen_id,
↪ df_measurement_configs=None, dict_of_df_records=None,
↪ dict_of_filenames=None):
2     _str_description = df_measurement_configs.loc[
↪ df_measurement_configs['Scenario IDs'] == str_scen_id, '
↪ Diagramm description'].iloc[0]
3
4     if dict_of_filenames is not None:
5         _str_filepath = r'./data_files/' + dict_of_filenames[
↪ str_scen_id]
6     else:
7         _str_filepath = ''
8
9     # Search recursively in dictionary of data records with
10    # the scenario IDs to get the dataframe names
11    for df_names in dict_of_df_records:
12        if str_scen_id in df_names:
13            _df_handle = dict_of_df_records[df_names]
14
15    #print(_str_description)
16    #print(_str_filepath)
17    #display(_df_handle.head(3))
18
19    return _df_handle, _str_description, _str_filepath

```

This function is used to plot the CPU temperature, the CPU frequency and the ambient temperature from a single measurement.

```

1 # Function for plotting the single measurements
2 def plot_single_measurement(str_scen_id):
3     """Plot the CPU temperature, the CPU frequency and
4     the ambient temperature from a single measurement.
5     """
6     # Retrieve all necessary data
7     _df_handle, _str_title, _str_filepath =
↪ get_data_and_meta_infos_for_plotting(str_scen_id,
↪ df_measurement_configs, dict_of_df_records, dict_of_filenames

```

```

8
9     metadata={'ipub': {
10         'figure': {
11             'caption': 'Plot caption: {0}'.format(_str_title)}}}
12
13     # Figsize: a tuple (width, height) in inches
14     # Create figure and axis objects with subplots()
15     fig, ax1 = plt.subplots(num=0, figsize=(20, 10), dpi=80,
16     ↪ facecolor='w', edgecolor='k')
17
18     axes = plt.gca()
19
20     plt.title(_str_title)
21
22     # List of named colors: https://matplotlib.org/stable/gallery/
23     ↪ color/named_colors.html
24     line1 = ax1.plot(_df_handle['Time'], _df_handle['CPU
25     ↪ Temperature'], color='navy', label='CPU Temperature')
26     line2 = ax1.plot(_df_handle['Time'], _df_handle['Ambient
27     ↪ Temperature'], color='lightseagreen', label='Ambient
28     ↪ Temperature')
29
30     # Set x-axis label
31     ax1.set_xlabel('Time [s]', fontsize=14)
32     # Set y-axis label
33     ax1.set_ylabel('CPU core temperature [°C]', fontsize=16)
34     ax1.set_ylim(0, 102)
35     ax1.grid(True)
36     plt.xticks(rotation=50)
37
38     # Twin object for two different y-axis on the same plot
39     ax2 = ax1.twinx()
40
41     line3 = ax2.plot(_df_handle['Time'], _df_handle['CPU Frequency'
42     ↪ ], color='limegreen', label='CPU Frequency')
43
44     # Set y-axis label
45     ax2.set_ylabel('CPU core frequency [MHz]', fontsize=16)
46     ax2.set_ylim(500, 1510)
47     ax2.grid(True)
48
49     # Add all lines to the same legend box
50     lines_all = line1+line2+line3
51     labels = [l.get_label() for l in lines_all]
52     ax1.legend(lines_all, labels, loc='lower center')
53
54     # Save plot to PNG and PDF
55     plt.savefig(_str_filepath + '.png')
56     plt.savefig(_str_filepath + '.pdf')
57
58     #plt.show()
59
60     display(fig, metadata=metadata)
61     plt.close()

```

```

56
57     return _str_title

```

6.4 Display / Plot data from dataframes

6.4.1 Comparative representation of the temperature curves


This is a comparative representation of the temperature curves over all examined cooling variants for Raspberry Pi B4 and 3B+.

```

1  # figsize: a tuple (width, height) in inches
2  plt.figure(num=0, figsize=(20, 10), dpi=80, facecolor='w',
   ↪   edgecolor='k')
3  axes = plt.gca()
4
5  plt.title('RaspiB4JupyterLab / RaspiB3plusEPaper stress
   ↪   measurements with different cooling types')
6
7  for scen_IDs in df_measurement_configs['Scenario IDs']:
8      _df_handle, _str_title, _str_filepath =
   ↪   get_data_and_meta_infos_for_plotting(scen_IDs,
   ↪   df_measurement_configs, dict_of_df_records, dict_of_filenames
   ↪   )
9
10     if (not len(_df_handle) == 0) and \
11         (scen_IDs != 'scen_id_06') and \
12         (scen_IDs != 'scen_id_07') and \
13         (scen_IDs != 'scen_id_08'):
14         _str_label = scen_IDs.replace('scen_id_', '') + ': ' +
   ↪   _str_title
15         plt.plot(_df_handle['Time'], _df_handle['CPU Temperature'],
   ↪   '-', label=_str_label)
16
17     #plt.plot(df_12_woC_wHeatSinksAndCtrlFan5V_65C['Time'],
   ↪   df_12_woC_wHeatSinksAndCtrlFan5V_65C['Ambient Temperature'],
   ↪   '-', label='Ambient Temperature')
18
19     plt.xlabel('Time [s]')
20     plt.ylabel('CPU core temperature [$^\circ$C]')
21
22     plt.ylim(0, 100)
23
24     plt.grid(True)
25
26     plt.setp(plt.gca().xaxis.get_majorticklabels(), 'rotation', 50)
27
28     plt.legend()
29
30     # Save plot to PNG and PDF
31     str_image_name = '
   ↪   RaspiB4JupyterLab_RaspiB3plusEPaper_stress_measurement_all_scenarios_compar
   ↪   '
32     #plt.savefig(r'./data_files/' + str_image_name + '.png')
33     plt.savefig(r'./data_files/' + str_image_name + '.pdf')

```


```
34
35 plt.show()
```

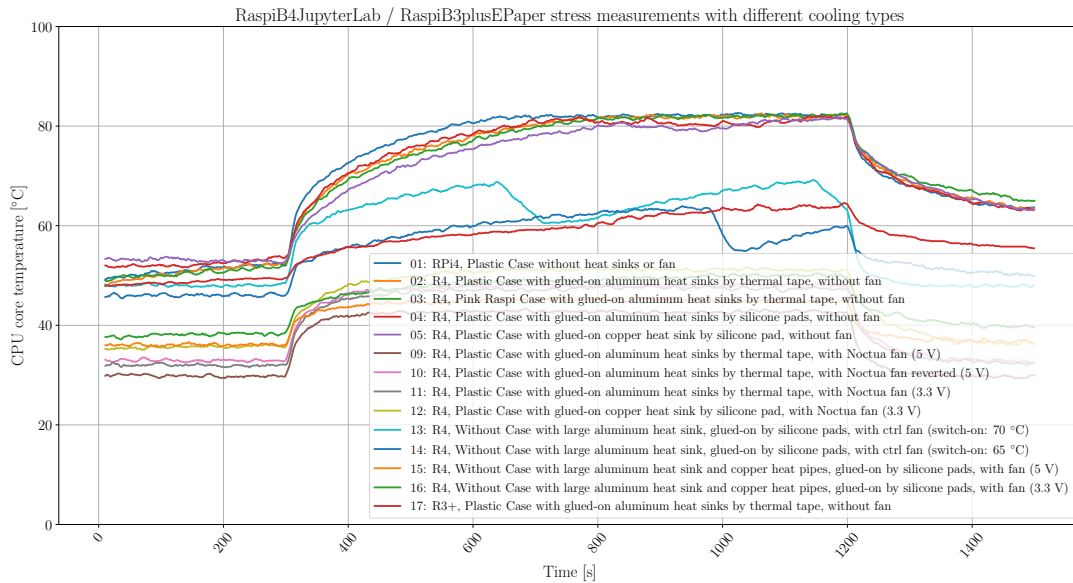

6.4.2 Scenario 01: RPi4, Plastic Case without heat sinks or fan

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant “passive cooling: without heat sinks or fan”.

```
1 diagram_title_str = plot_single_measurement('scen_id_01')
```

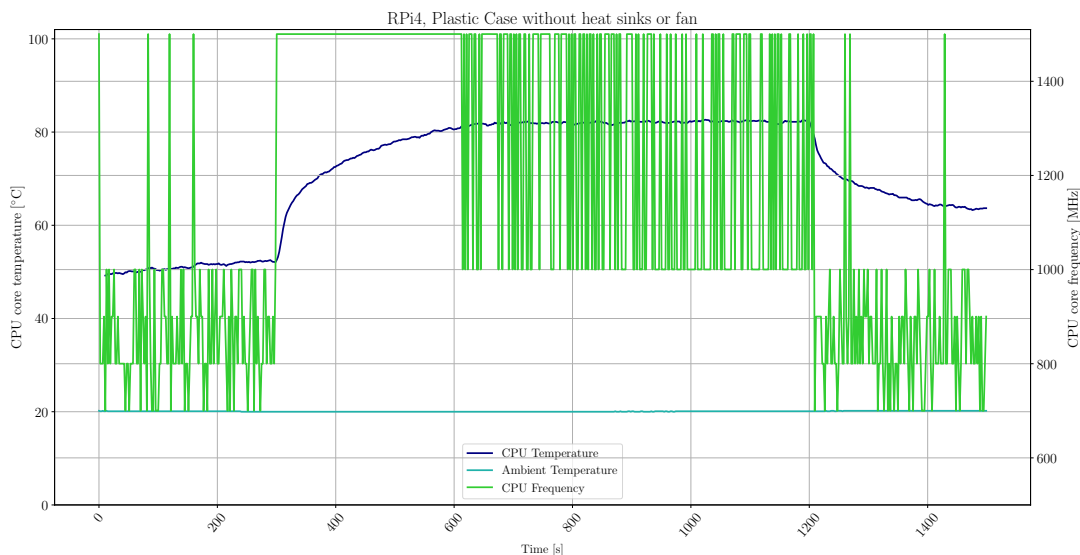


```
1 section_title_str = 'Scenario 01: ' + diagram_title_str
2 print_latex(section_title_str)
```

Scenario 01: RPi4, Plastic Case without heat sinks or fan

6.4.3 Scenario 02: R4, Plastic Case with glued-on aluminum heat sinks by thermal tape, without fan

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant “glued-on heat sinks without fan”. The thermal coupling between the CPU and the **aluminum** heat sink is made of double-sided **thermal tape**.

```
1 diagram_title_str = plot_single_measurement('scen_id_02')
```

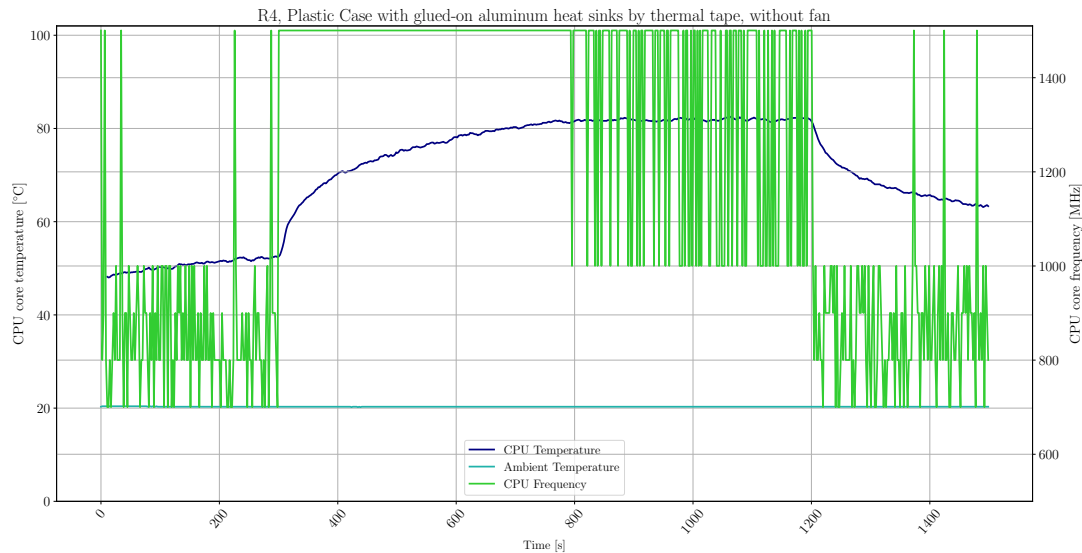


```
1 section_title_str = 'Scenario 02: ' + diagram_title_str
2 print_latex(section_title_str)
```

Scenario 02: R4, Plastic Case with glued-on aluminum heat sinks by thermal tape, without fan

6.4.4 Scenario 04: R4, Plastic Case with glued-on aluminum heat sinks by silicone pads, without fan

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant “glued-on heat sinks without fan”. The thermal coupling between the CPU and the **aluminum** heat sink is made of a **silicon pad**.

```
1 diagram_title_str = plot_single_measurement('scen_id_04')
```

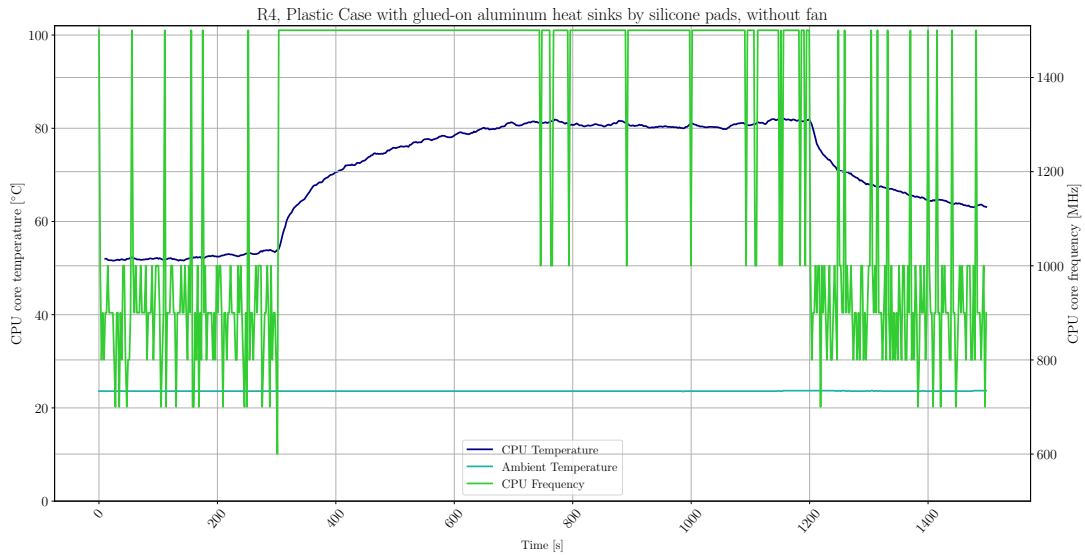


```
1 section_title_str = 'Scenario 04: ' + diagram_title_str
2 print_latex(section_title_str)
```

Scenario 04: R4, Plastic Case with glued-on aluminum heat sinks by silicone pads, without fan

6.4.5 Scenario 05: R4, Plastic Case with glued-on copper heat sink by silicone pad, without fan

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant “glued-on heat sinks without fan”. The thermal coupling between the CPU and the **copper** heat sink is made of a **silicon pad**.

```
1 diagram_title_str = plot_single_measurement('scen_id_05')
```

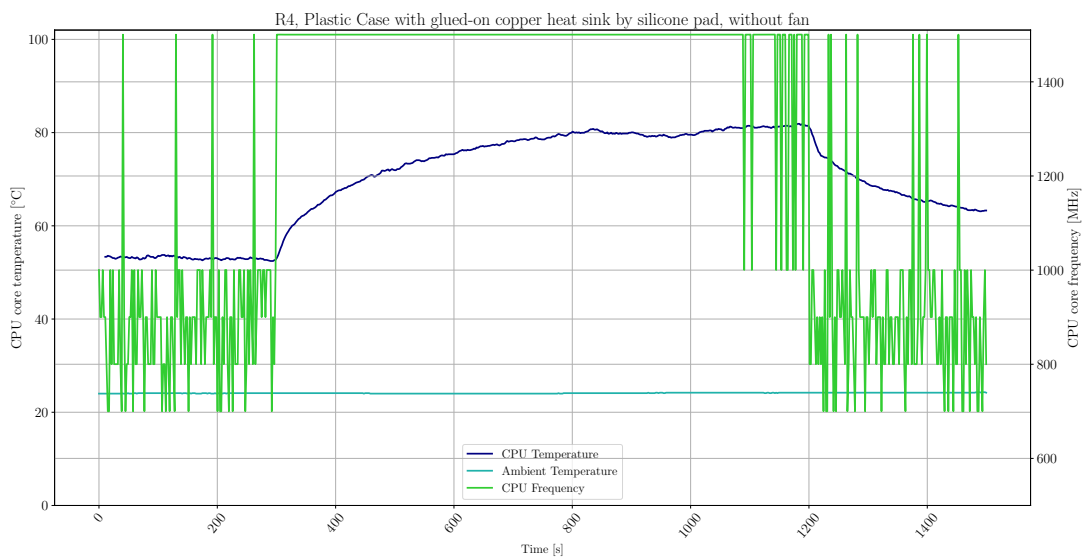

```

1 section_title_str = 'Scenario 05: ' + diagram_title_str
2 print_latex(section_title_str)

```

Scenario 05: R4, Plastic Case with glued-on copper heat sink by silicone pad, without fan

6.4.6 Scenario 11: R4, Plastic Case with glued-on aluminum heat sinks by thermal tape, with Noctua fan (3.3 V)

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant “glued-on heat sinks with **Noctua fan** (driven by **3.3 V**)”. The thermal coupling between the CPU and the **aluminum** heat sink is made of double-sided **thermal tape**.

```

1 diagram_title_str = plot_single_measurement('scen_id_11')

```

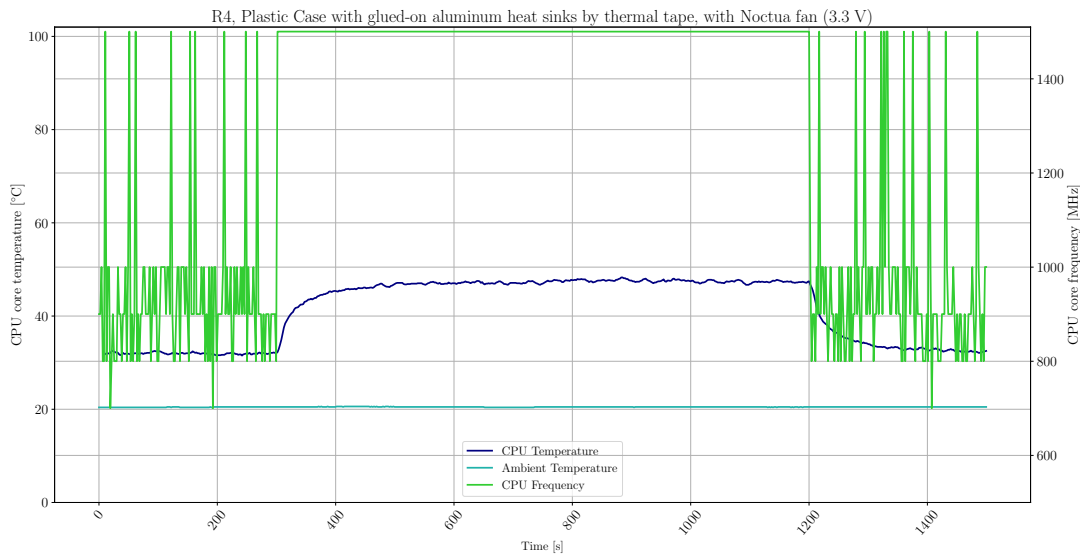


Figure 6.1: Plot: R4, Plastic Case with glued-on aluminum heat sinks by thermal tape, with Noctua fan (3.3 V)

```

1 section_title_str = 'Scenario 11: ' + diagram_title_str
2 print_latex(section_title_str)

```

Scenario 11: R4, Plastic Case with glued-on aluminum heat sinks by thermal tape, with Noctua fan (3.3 V)

```

1 section_title_str = 'Scenario 12: ' + diagram_title_str
2 display_markdown('### {0}'.format(section_title_str), raw=True)

```

6.4.7 Scenario 12: R4, Plastic Case with glued-on copper heat sink by silicone pad, with Noctua fan (3.3 V)

6.4.8 Scenario 12: R4, Plastic Case with glued-on copper heat sink by silicone pad, with Noctua fan (3.3 V)

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant “glued-on heat sinks with **Noctua fan** (driven by **3.3 V**)”. The thermal coupling between the CPU and the **copper** heat sink is made of a **silicon pad**.


```
1 diagram_title_str = plot_single_measurement('scen_id_12')
```

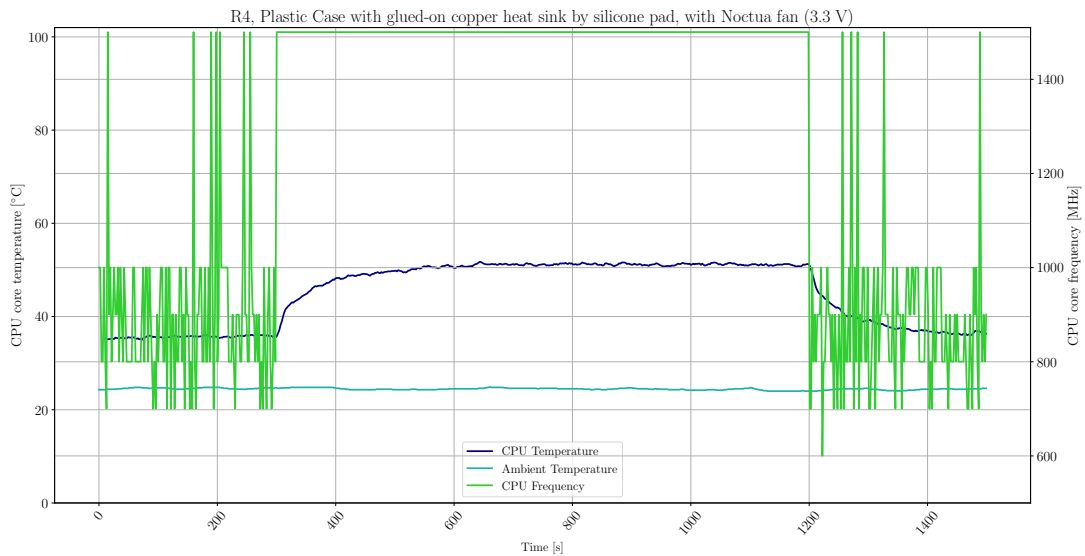


Figure 6.2: Plot caption: R4, Plastic Case with glued-on copper heat sink by silicone pad, with Noctua fan (3.3 V)

6.4.9 Scenario 14: R4, Without Case with large aluminum heat sink, glued-on by silicone pads, with ctrl fan (switch-on: 65 °C)

The thermal images show the **Raspberry Pi 4B** in idle (fig. 6.3) state and under CPU full load (fig. 6.4). The images were taken with the thermal camera *Ti 480 Thermal Imager (Fluke)*:

```
1 Image('images/thermal_images/
    ↳ RPi4_thermalImage_idleMode_wHeatSinkAndCtrlFan5V.jpg', height
    ↳ =400)
```

```
1 Image('images/thermal_images/
    ↳ RPi4_thermalImage_heavyLoadMode_wHeatSinkAndCtrlFan5V.jpg',
    ↳ height=400)
```

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant *without Case and one big heat sink with controlled fan (driven by 5 V and 65 °C switch-on temperature)*. The thermal couplings between the CPU, RAM and USB controller and the big **aluminum** heat sink are made of a **silicon pads**.

```
1 diagram_title_str = plot_single_measurement('scen_id_14')
```


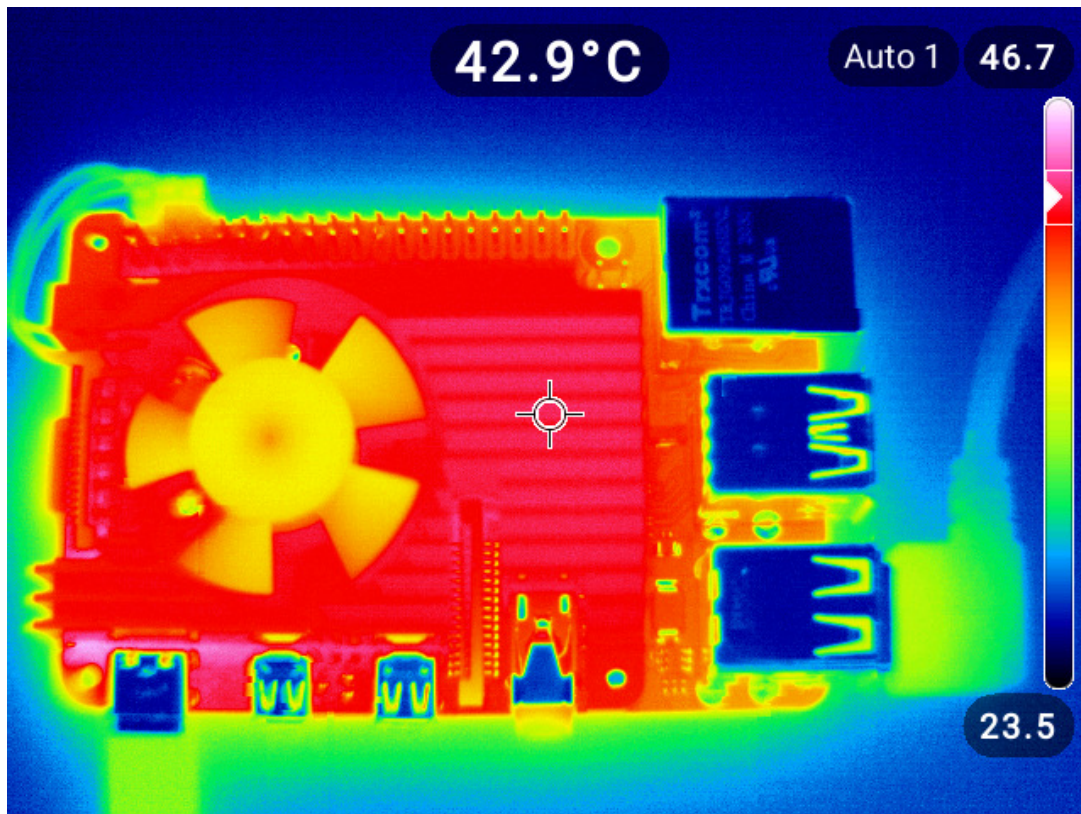


Figure 6.3: Thermal image of the RPi 4B in idle state

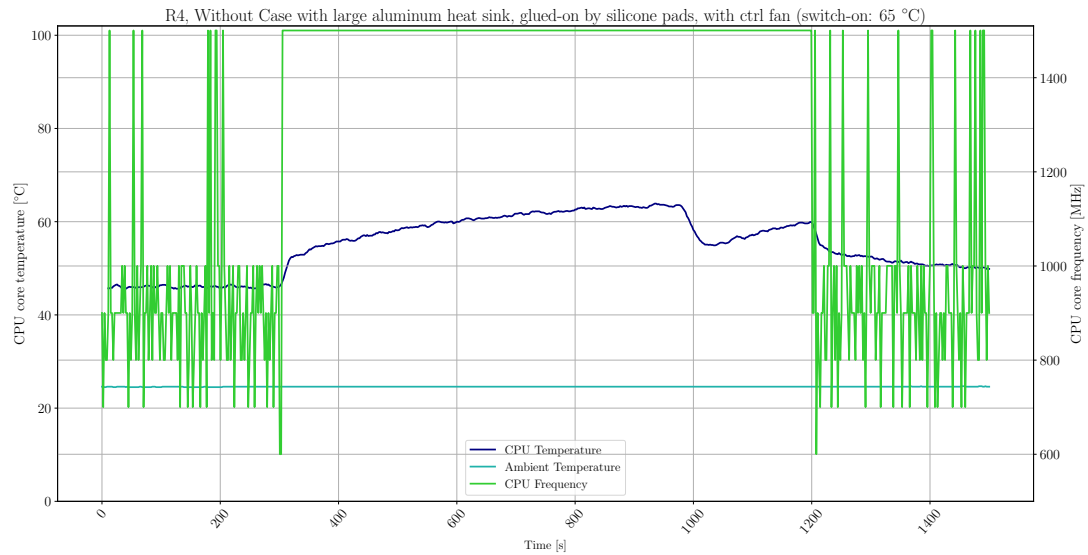

```
1 section_title_str = 'Scenario 14: ' + diagram_title_str
2 print_latex(section_title_str)
```

Scenario 14: R4, Without Case with large aluminum heat sink, glued-on by silicone pads, with ctrl fan (switch-on: 65 °C)


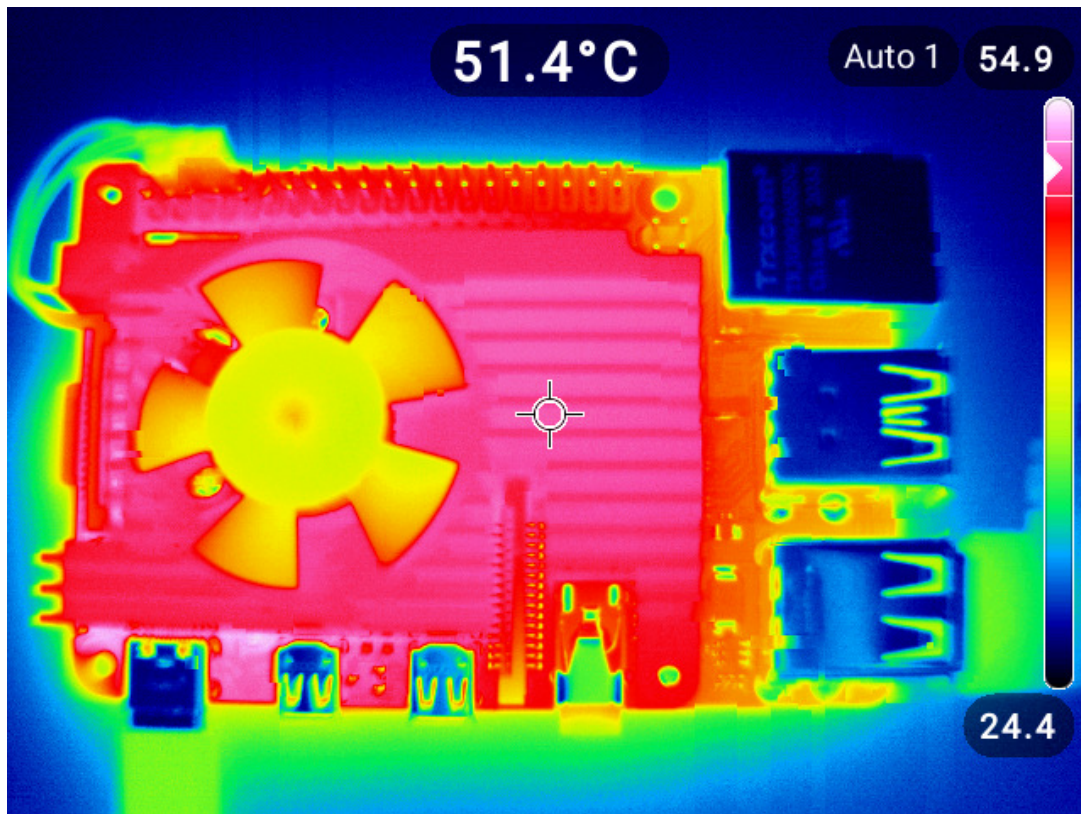


Figure 6.4: Thermal image of the RPi 4B under CPU full load

6.4.10 Scenario 15: R4, Without Case with large aluminum heat sink and copper heat pipes, glued-on by silicone pads, with fan (5 V)

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant “wo Case and **one big aluminium heat sink** and with two **large copper heat pipes** and cooled by a **fan** (driven by 5 V)”. The thermal coupling between the CPU the cooling plate of the heat sink is made of a **silicon pads**.

```
1 diagram_title_str = plot_single_measurement('scen_id_15')
```

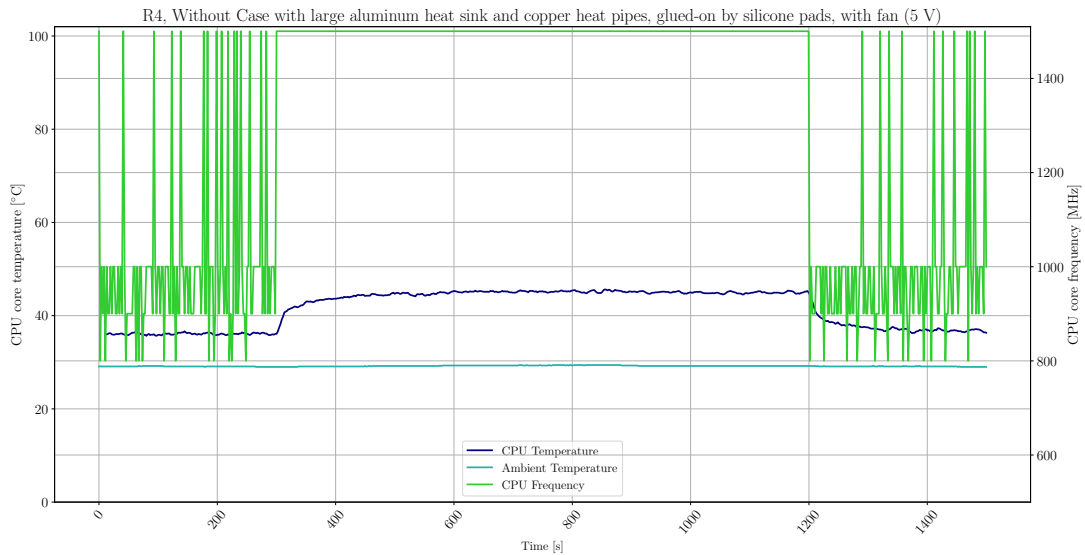


```
1 section_title_str = 'Scenario 15: ' + diagram_title_str
2 print_latex(section_title_str)
```

Scenario 15: R4, Without Case with large aluminum heat sink and copper heat pipes, glued-on by silicone pads, with fan (5 V)

6.4.11 Scenario 16: R4, Without Case with large aluminum heat sink and copper heat pipes, glued-on by silicone pads, with fan (3.3 V)

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi B4 with the cooling variant “wo Case and **one big aluminium heat sink** and with two **large copper heat pipes** and cooled by a **fan** (driven by **3.3 V**)”. The thermal coupling between the CPU the cooling plate of the heat sink is made of a **silicon pads**.

```
1 diagram_title_str = plot_single_measurement('scen_id_16')
```

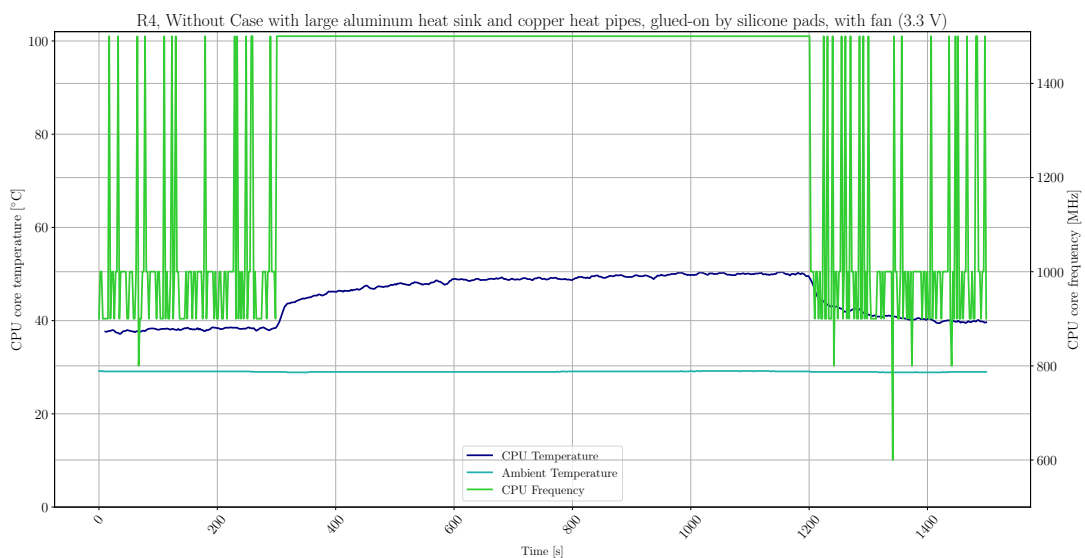


```

1 section_title_str = 'Scenario 16: ' + diagram_title_str
2 print_latex(section_title_str)

```

Scenario 16: R4, Without Case with large aluminum heat sink and copper heat pipes, glued-on by silicone pads, with fan (3.3 V)

6.4.12 Scenario 17: R3+, Plastic Case with glued-on aluminum heat sinks by thermal tape, without fan

The following thermal images show the **Raspberry Pi 3B+** in idle (fig. 6.5) state and under CPU full load (fig. 6.6). The images were taken with the thermal camera *Ti 480 Thermal Imager (Fluke)*:

```

1 Image('images/thermal_images/RPi3Bplus_thermalImage_idleMode_c.jpg'
    ↪ , height=400)

```

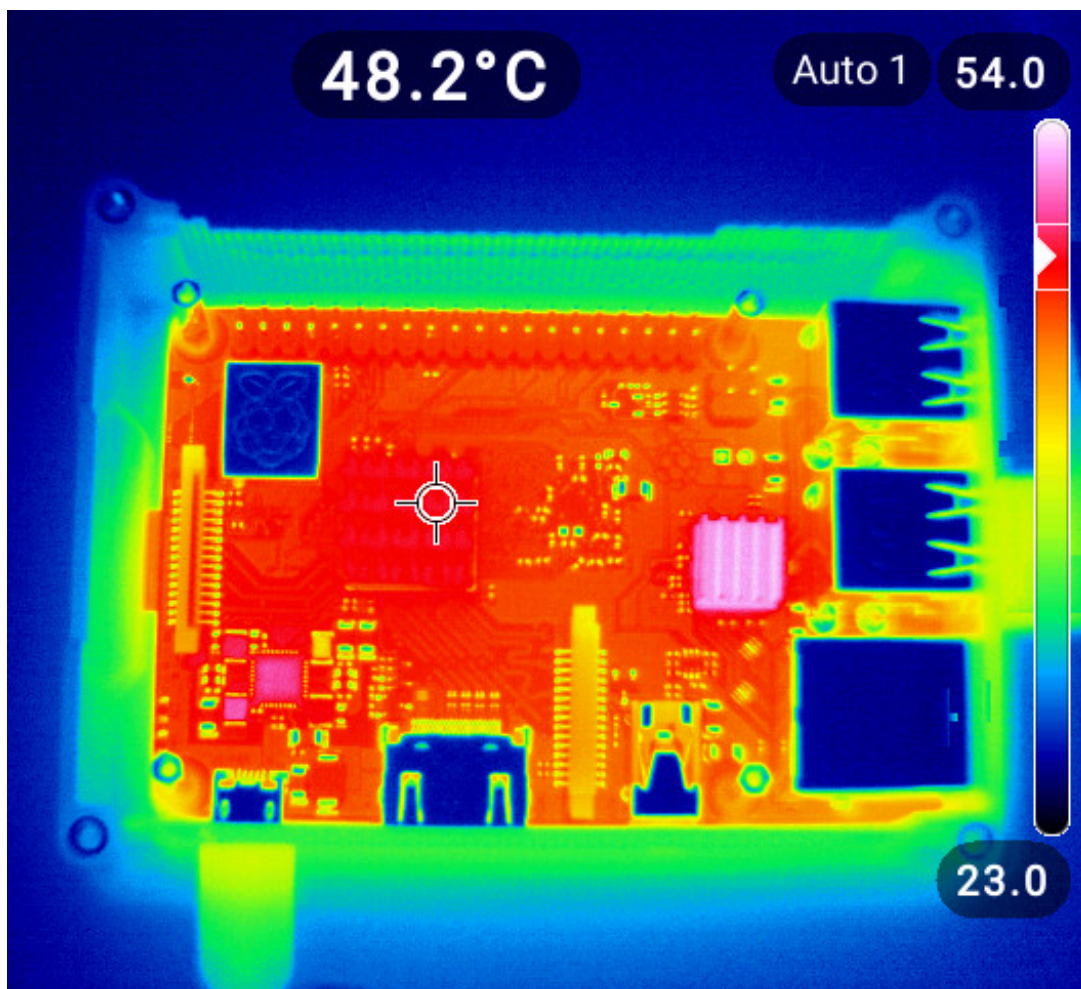


Figure 6.5: Thermal image of the RPi 3B+ in idle state

```

1 Image('images/thermal_images/RPi3Bplus_thermalImage_heavyLoadMode_c
    ↪ .jpg', height=400)

```

This is the plot of the temperature curve compared with the CPU frequency curve for the Raspberry Pi 3B+ with the cooling variant “glued-on heat sinks without fan”.


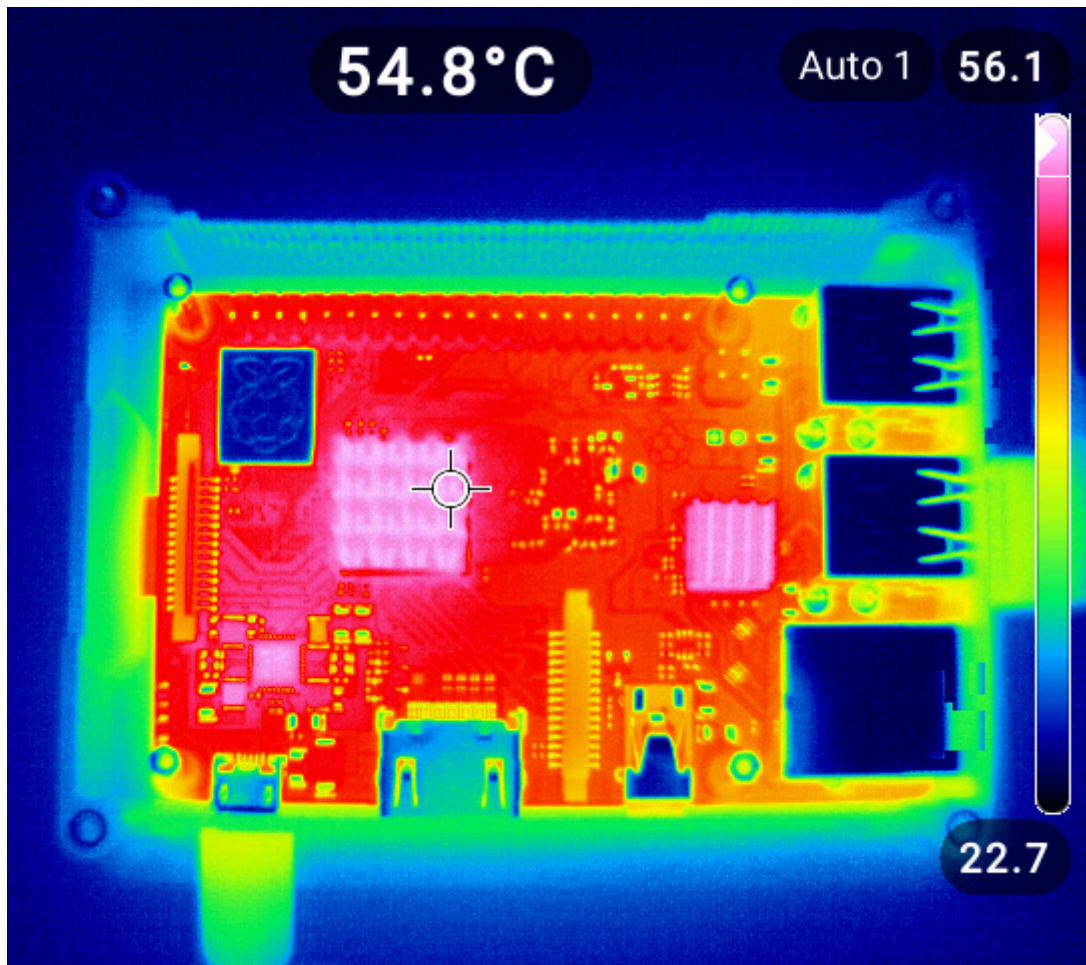


Figure 6.6: Thermal image of the RPi 3B+ under CPU full load

```
1 diagram_title_str = plot_single_measurement('scen_id_17')
```

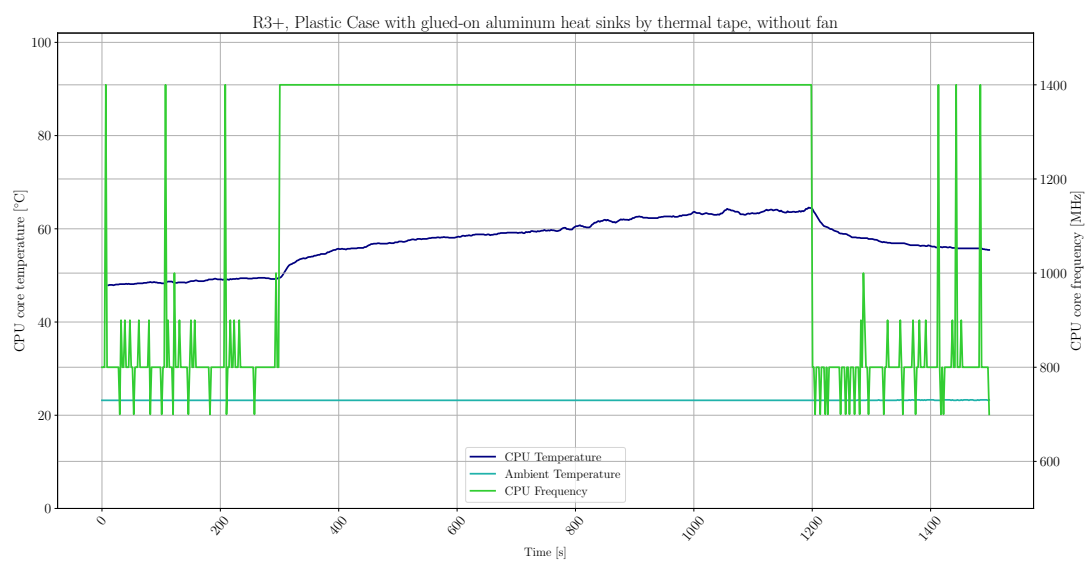

```
1 section_title_str = 'Scenario 17: ' + diagram_title_str
2 print_latex(section_title_str)
```

Scenario 17: R3+, Plastic Case with glued-on aluminum heat sinks by thermal tape, without fan

7 References